




Coby Kyros MID9042 Speakers Replacement

This guide will walk you through the steps to replace the inner speakers in your Coby Kryos MID9042 tablet.

Written By: Samantha Rollings

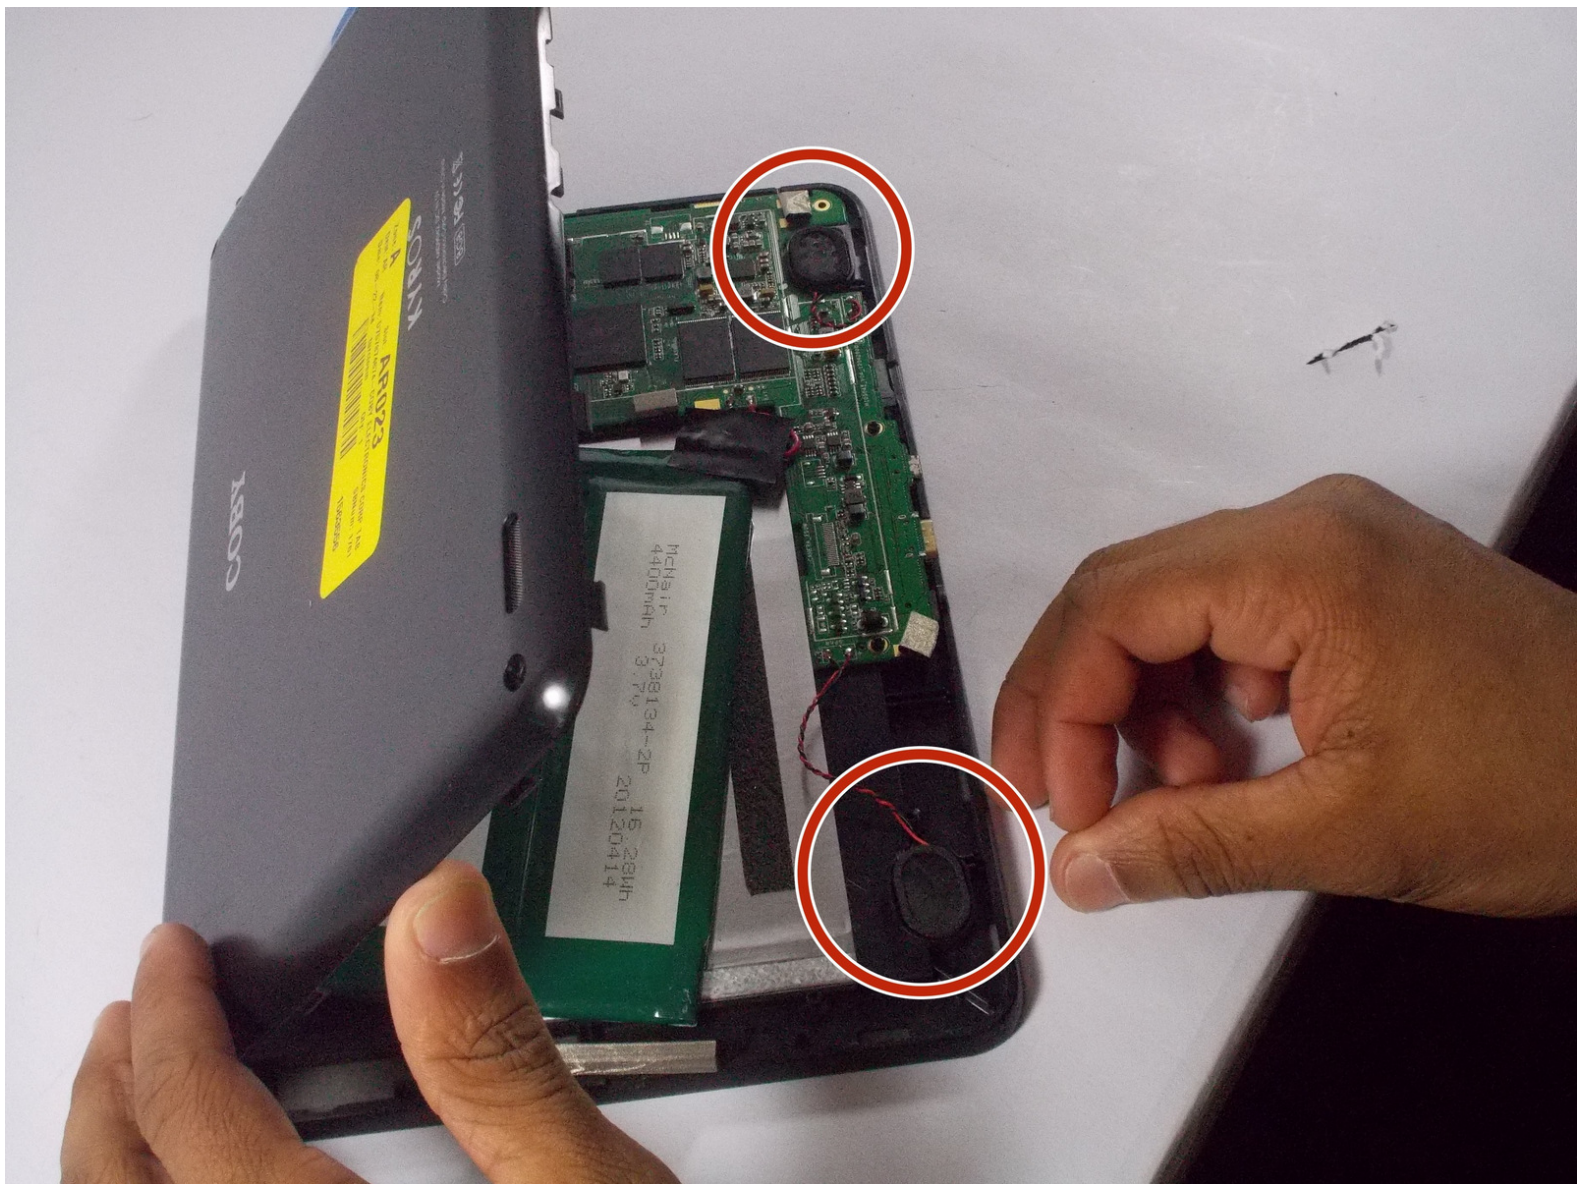



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-


Step 1 — Speakers



i Before taking apart the tablet, power off the device.

- Remove anti-slip pads from all 4 corners of the back of the device.
- Use Phillips #0 Precision screwdriver to remove the 4 screws from the back cover. (screws are about 1/8")


Step 2

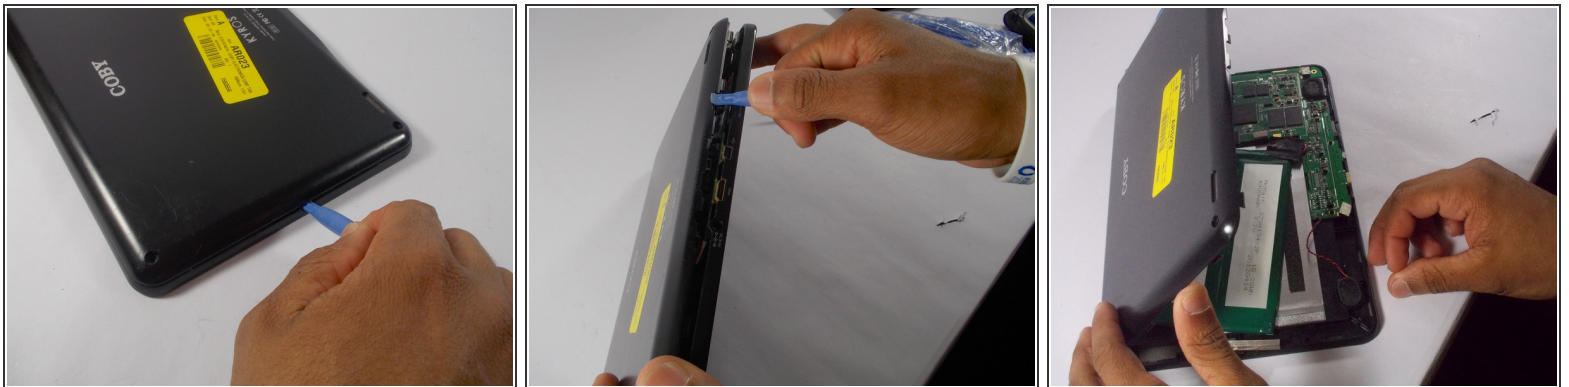

! Be careful not to break the inner plastic tabs while pulling the back cover off.

- Use the blue plastic opening tool to wedge the back cover apart from the front.
- Once the edges are wedged apart, use hands to lift up the back of the tablet.

Step 3

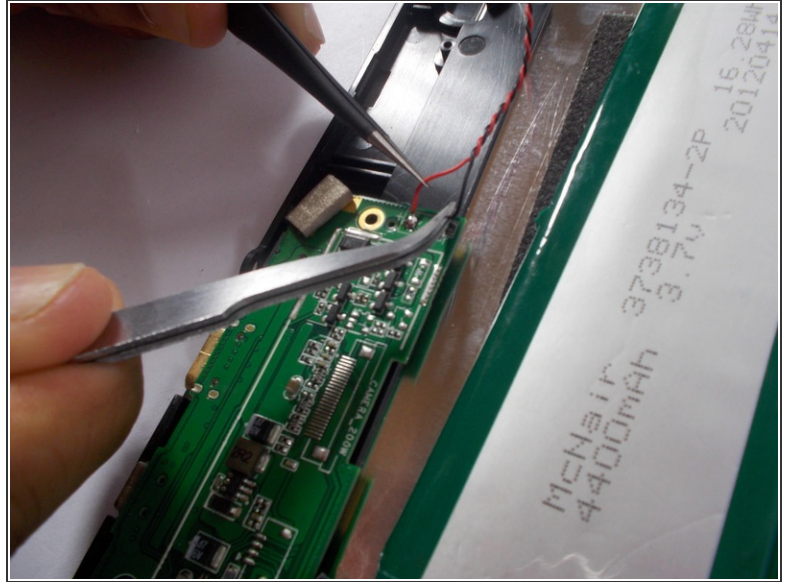

- Desolder the red and black speaker wires from the circuit board.
- Pull the speakers out of the tablet.
- ☑ Red wire connects to positive, black wire connects to negative.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 02:42:17 AM.